



APsystems Microinverter User Manual

APsystems QS2 Microinverter
(For EMEA)



ALTENERGY POWER SYSTEM Inc.
emea.APsystems.com

APsystems
Karspeldreef 8, 1101 CJ, Amsterdam, The Netherlands
EMAIL: support.emea@apsystems.com

APsystems
22 Avenue Lionel Terray 69330 Jonage France
EMAIL: support.emea@apsystems.com




Please scan this QR code to have
access to our APPs and Products
information

Table of Contents


1.Important Safety Instructions	2
1.1 Safety Instructions	2
1.2 Radio Interference Statement	3
1.3 Symbols in lieu of words	3
2.APsystems Microinverter System Introduction	4
3.APsystems Microinverter QS2 Introduction	6
4.APsystems Microinverter System Installation	7
4.1 Additional accessories supplied by APsystems	7
4.2 Other required accessories not supplied by APsystems	7
4.3 Installation Procedures	8
4.3.1 Step 1 - Verify that grid voltage matches Microinverter rating	8
4.3.2 Step 2 – Y3 AC Bus Cable distribution	8
4.3.3 Step 3 - Attach the APsystems Microinverters to the Racking	8
4.3.4 Step 4 - Connect APsystems Microinverters to the PV Modules	9
4.3.5 Step 5 - Ground the system	10
4.3.6 Step 6 - Connect the APsystems Microinverter to AC bus cable	11
4.3.7 Step 7 - Install a Bus Cable End Cap at the end of AC bus cable	11
4.3.8 Step 8 - AC Extension Cable	12
4.3.9 Step 9 - Connect APsystems Microinverters to Grid	12
4.3.10 Step 10 - Complete the APsystems installation map	13
5.APsystems Microinverter system operating instructions	13
6.Troubleshooting	14
6.1 Status Indications and Error Reporting	14
6.1.1 Start up LED	14
6.1.2 Operation LED	14
6.1.3 GFDI Error	14
6.2 ECU_APP	14
6.3 Installer EMA (web portal or EMA Manager APP)	14
6.4 Trouble Shooting Guide	14
6.5 APsystems Technical Support	15
6.6 Maintenance	15
7.Replace a Microinverter	16
8.Technical Data	17
8.1 QS2 Microinverter Datasheet	18
9.QS2 Accessory	19
9.1 Dimensions	19
9.2 Wiring Diagram	20
10. APsystems Microinverter Installation Map	21

9. QS2 Accessory

9.1 Dimensions

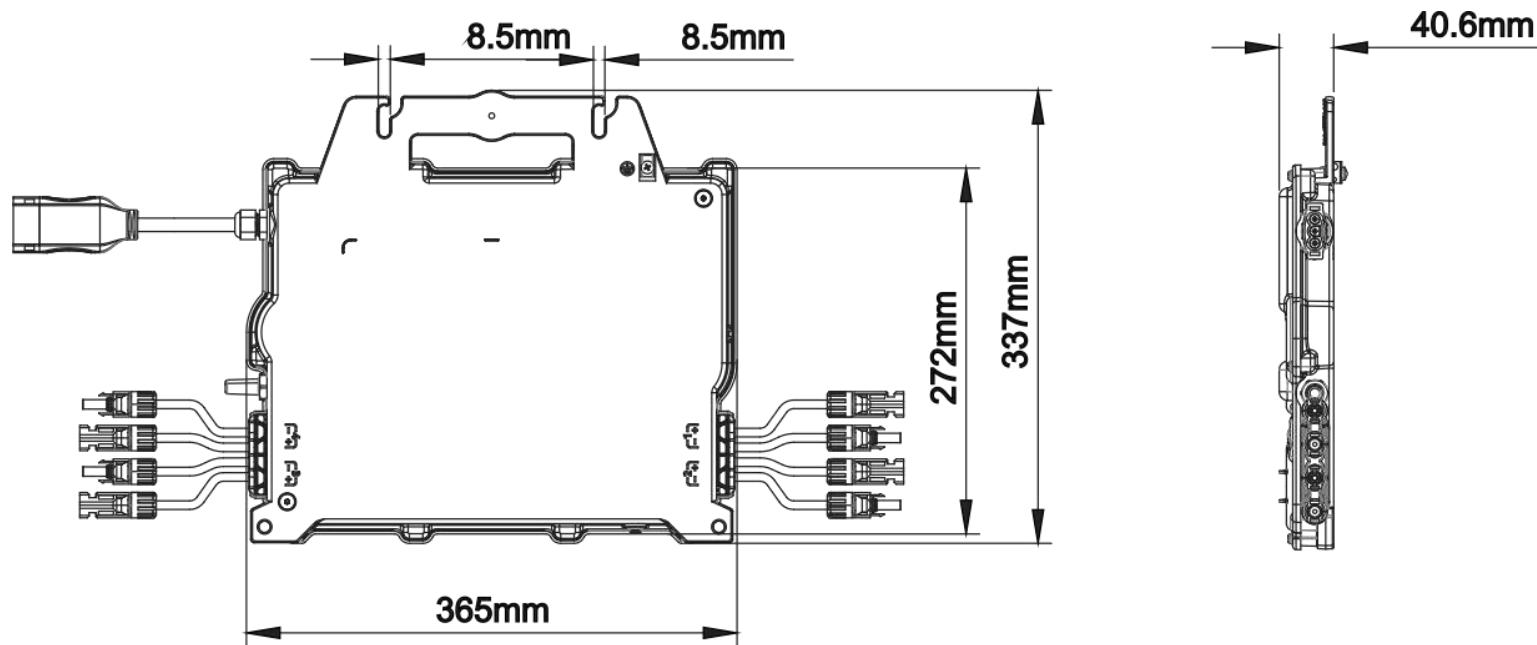

9.2 Wiring Diagram

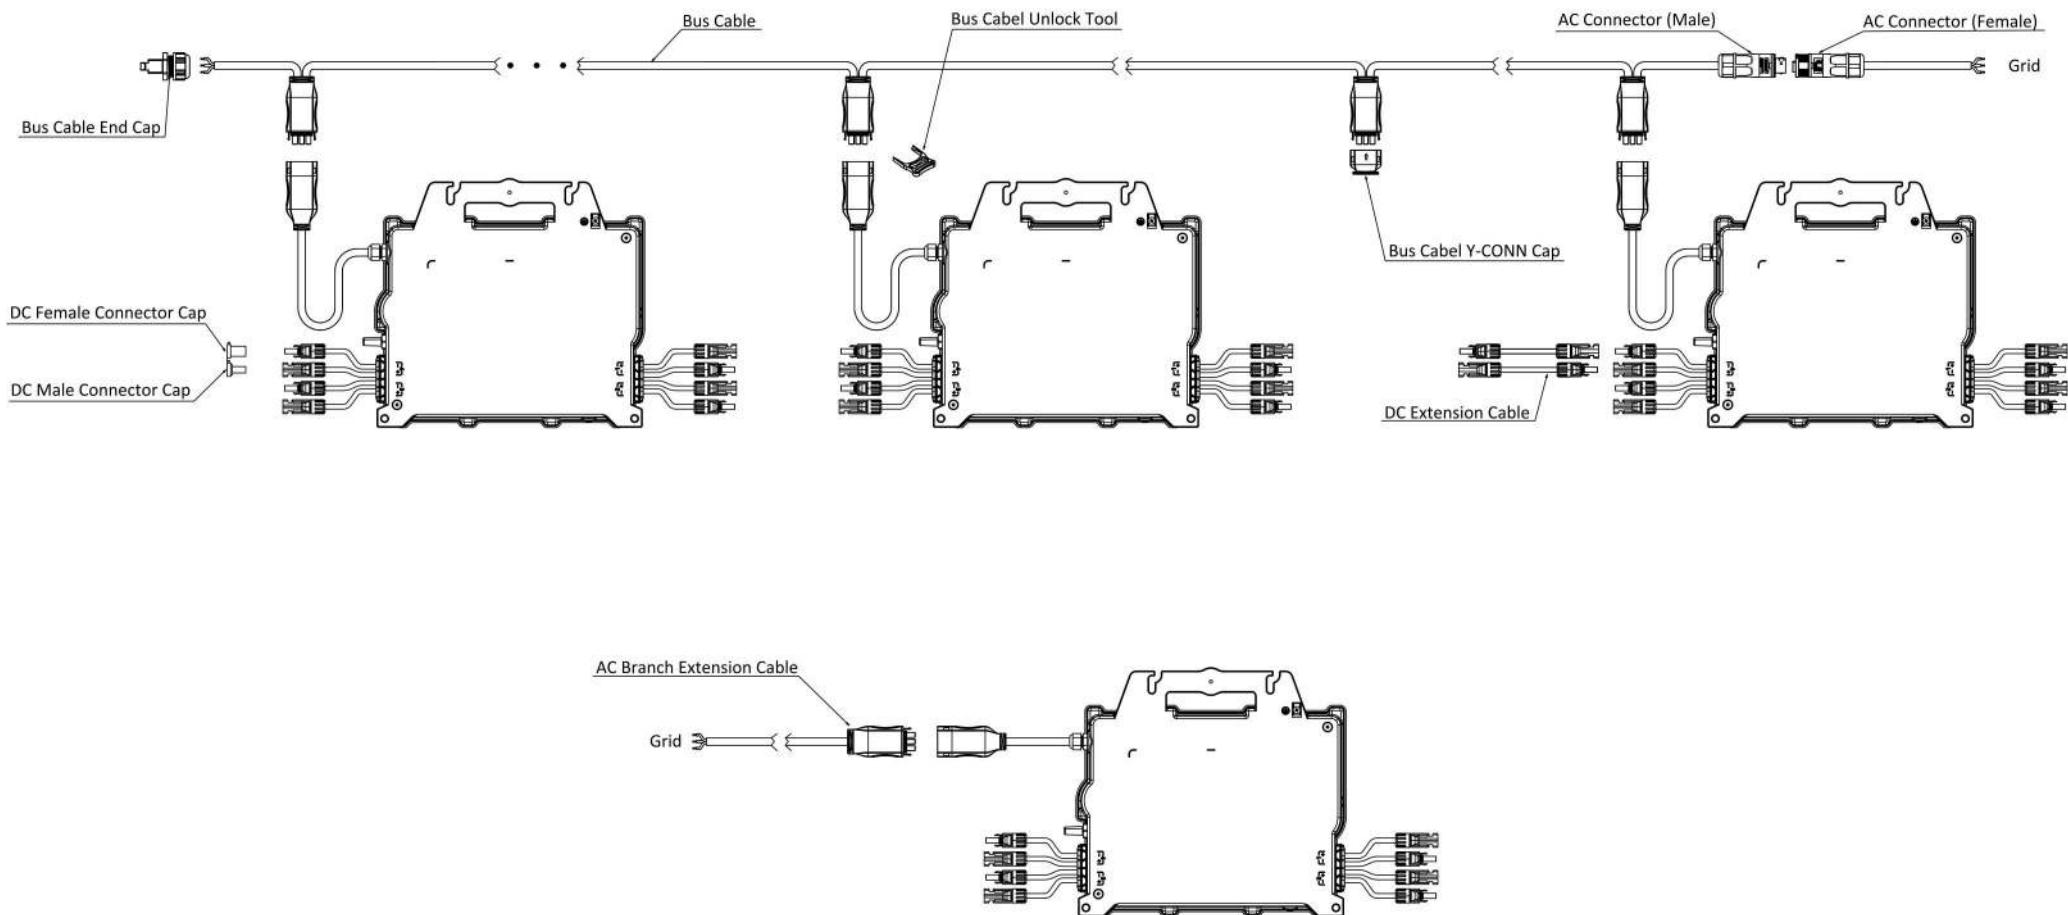

10. APsystems Microinverter Installation Map

The APsystems Installation Map is a diagram of the physical location of each microinverter in your PV installation. Each APsystems microinverter has two serial number labels. Peel the one label and affix it to the respective location on the APsystems installation map.

Installation Map Template

Installer:		PV module type:		Qty:		Sheet ____ of ____	N 
Owner:		Microinverter type:		Qty:			
	Column 1	Column 2	Column 3	Column 4	Column 5	Column 6	Column 7
Row 1							
Row 2							
Row 3							
Row 4							
Row 5							
Row 6							
Row 7							
Row 8							
Row 9							
Row 10							